




Hannspree Hannspad SN1AT71 Front and Rear Camera Replacement

This guide will show how to replace the camera.

Written By: matthew vandeventer

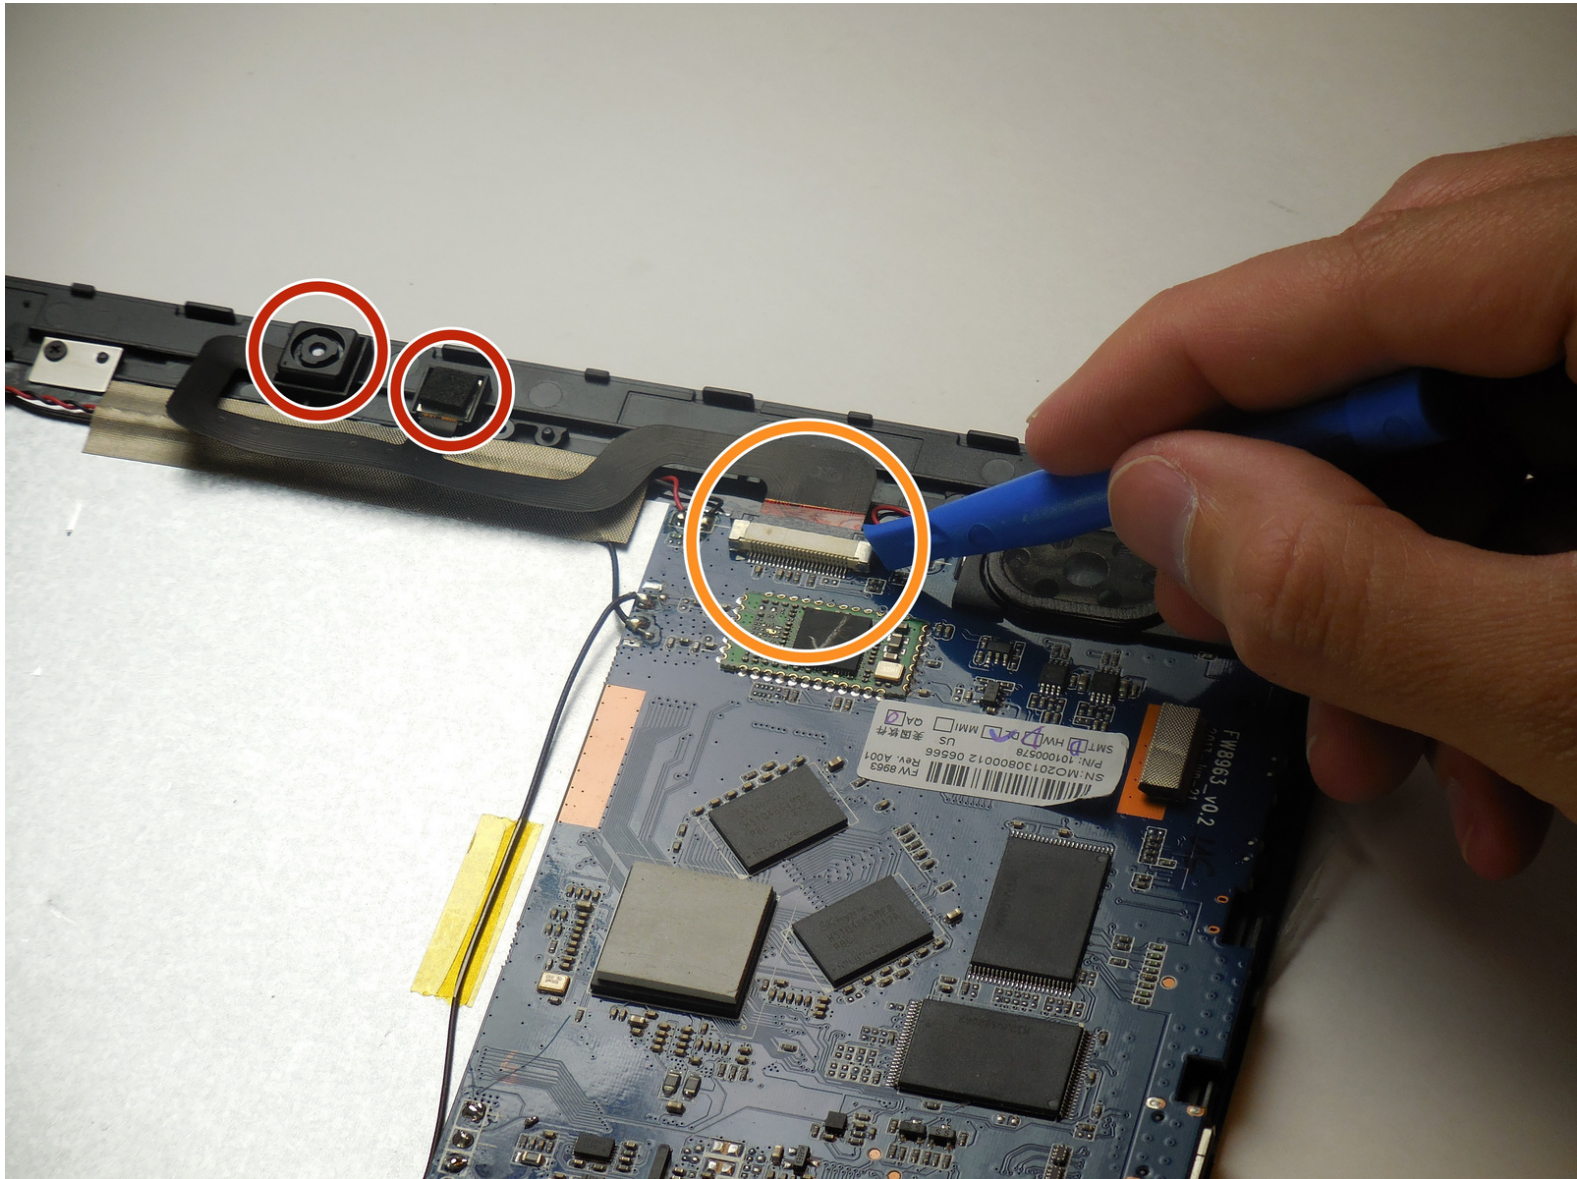

INTRODUCTION

After getting into the Hannspad, the Camera is fairly easy to replace.

TOOLS:



- [Metal Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
 - [Soldering Workstation](#) (1)
-

Step 1 — Back Panel Replacement



- Turn the device off.
 - Place the tablet screen side up.
- ⚠ Make sure the device is turned off to avoid damage.

Step 2

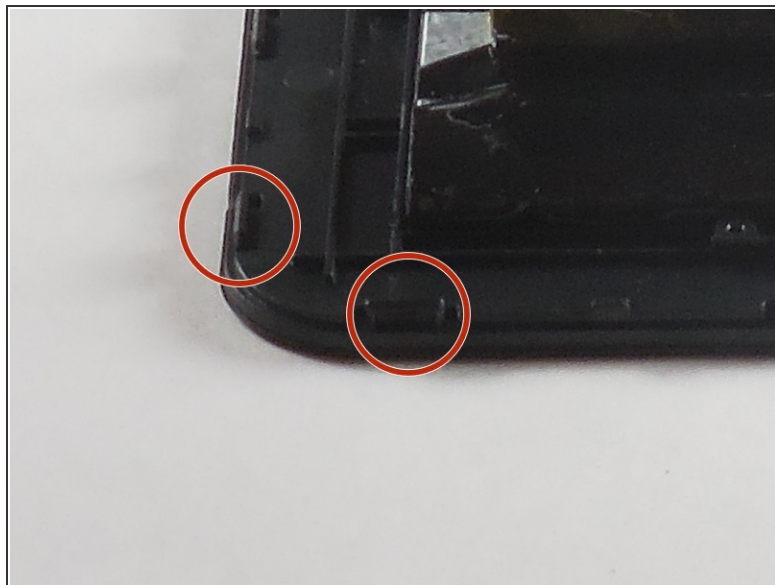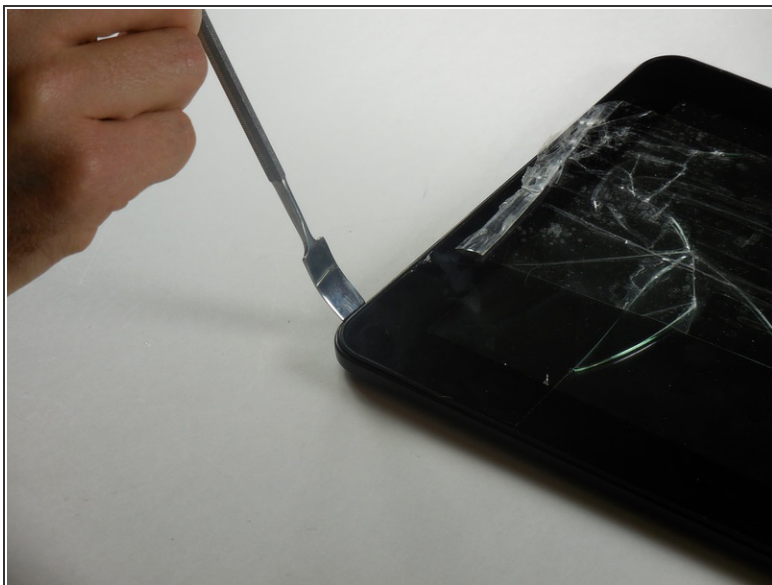


- Use the metal spudger to press an opening between screen and back cover.

- Plastic tabs



⚠ Be careful, as the plastic tabs are delicate.

Step 3

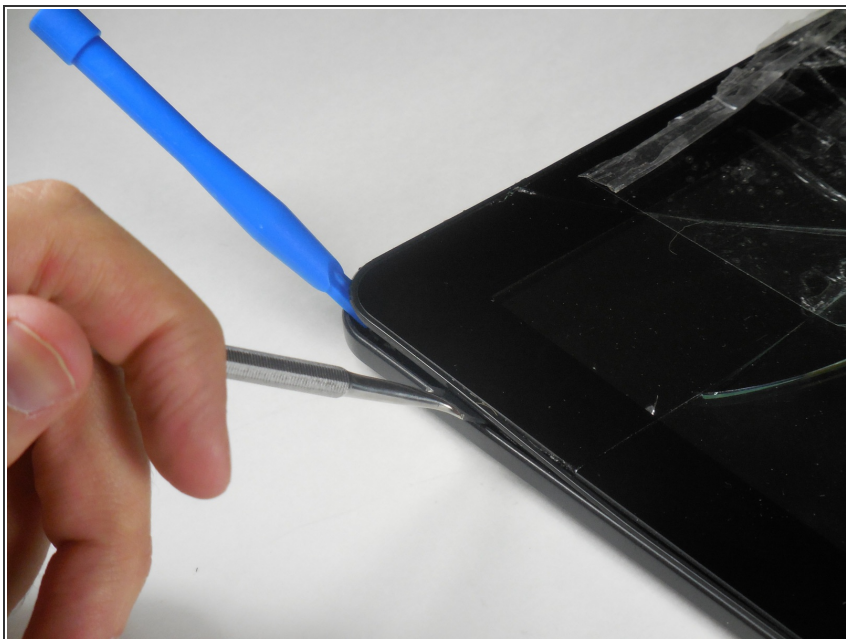

- Wedge the plastic opening tool between the screen and the back panel to keep tension constant.

Step 4

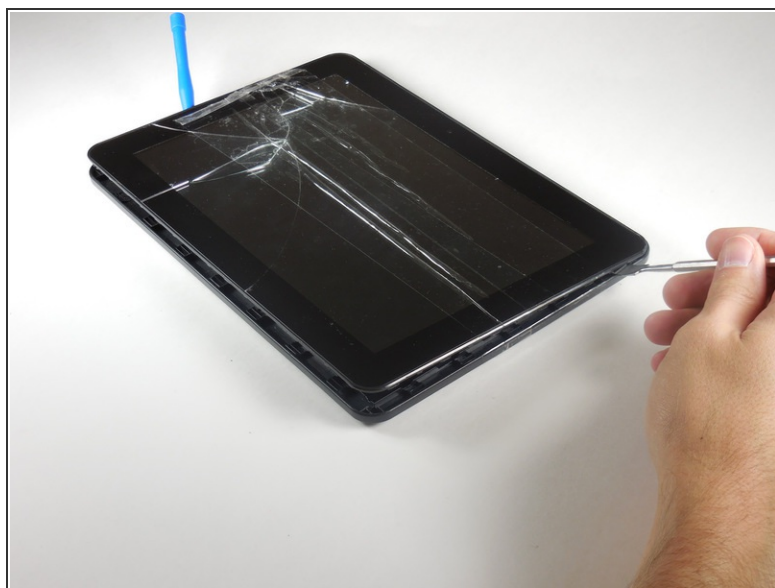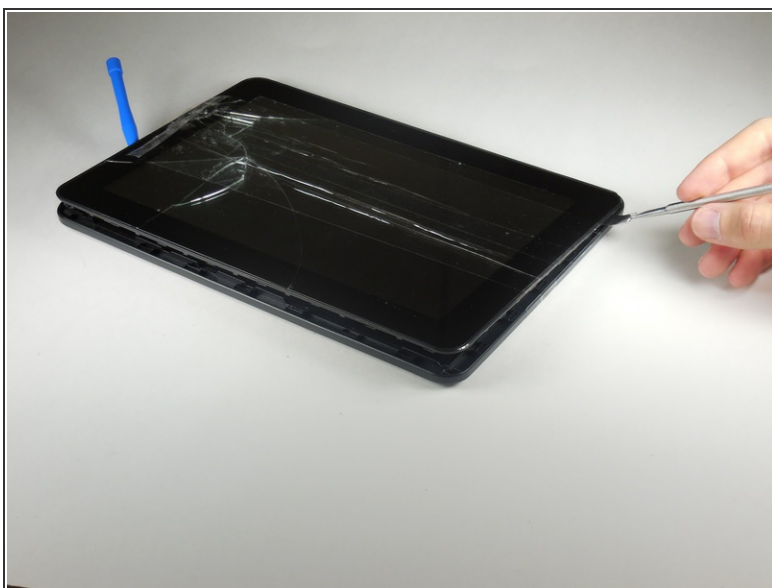



- Slide the metal spudger around the casing to separate it from the inside of the tablet.

Step 5




- After all the tabs are separated, flip tablet over so the screen side is down.
- Remove the back panel by delicately lifting straight up.

Step 6 — Battery Replacement

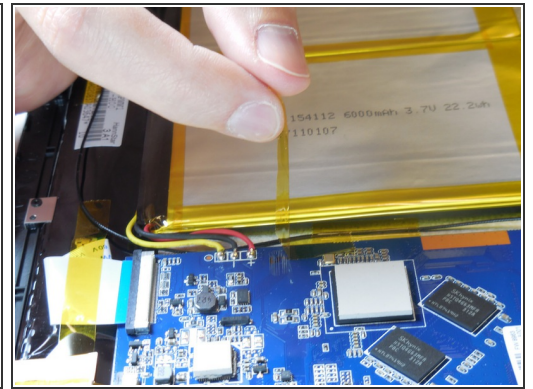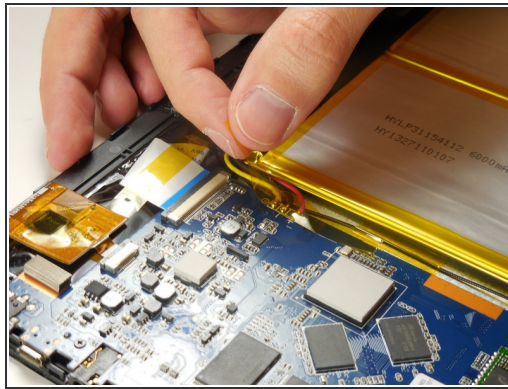

- Identify the DC power connection cables.
- Remove the adhesive tape.
- Battery
- Battery power connections

Step 7

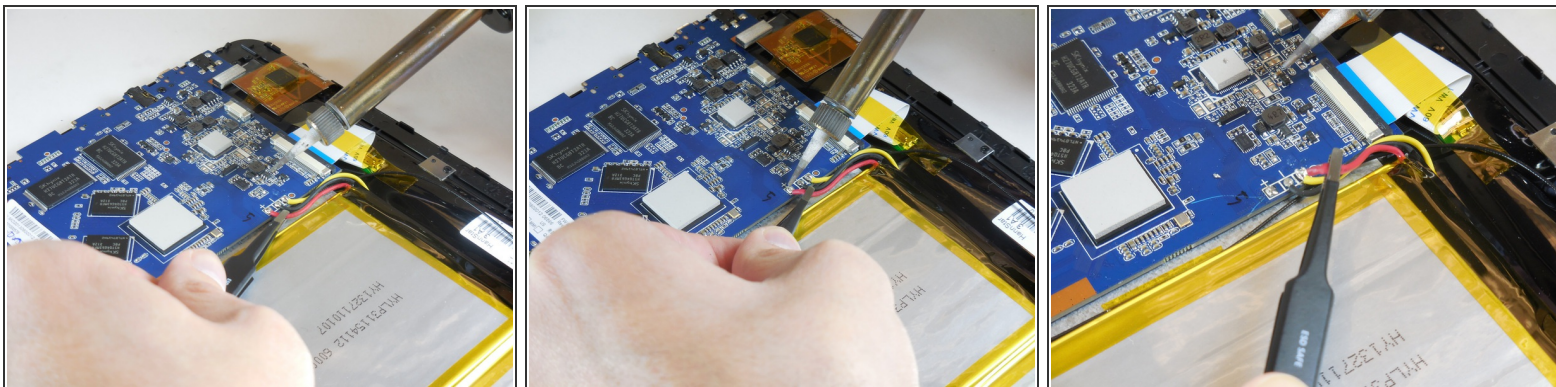


- Use the tweezers to grab hold of the red wire and desolder the connection to the circuit board.

⚠ The soldering iron is hot, and will cause the wires and motherboard to heat up.

ℹ Instructions for desoldering can be found on iFixit's page [Soldering](#)


Step 8

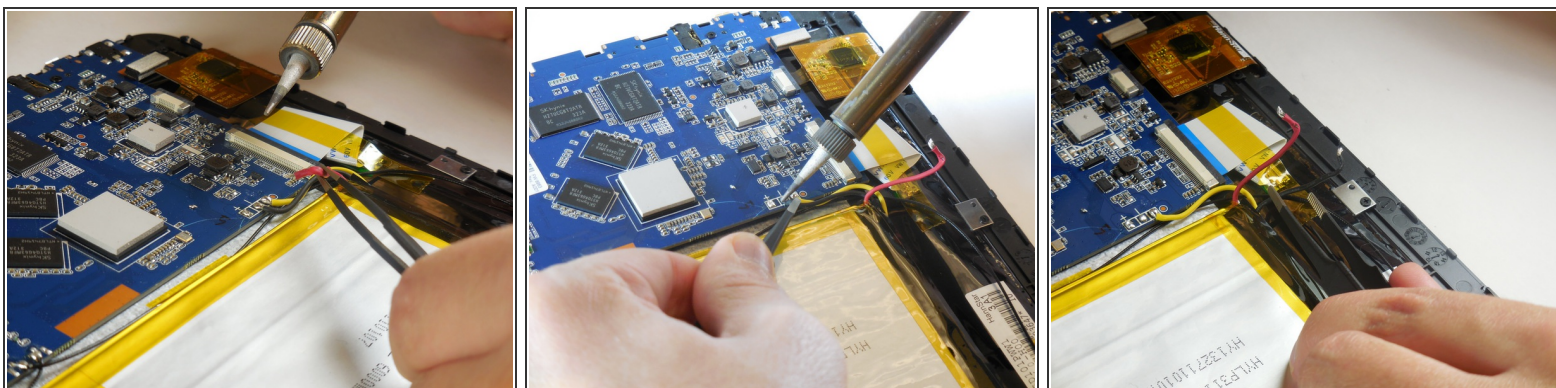

- Use the tweezers to grab the black wire and desolder the connection.

⚠ Do not let the ends of the black and red wires touch.

Step 9

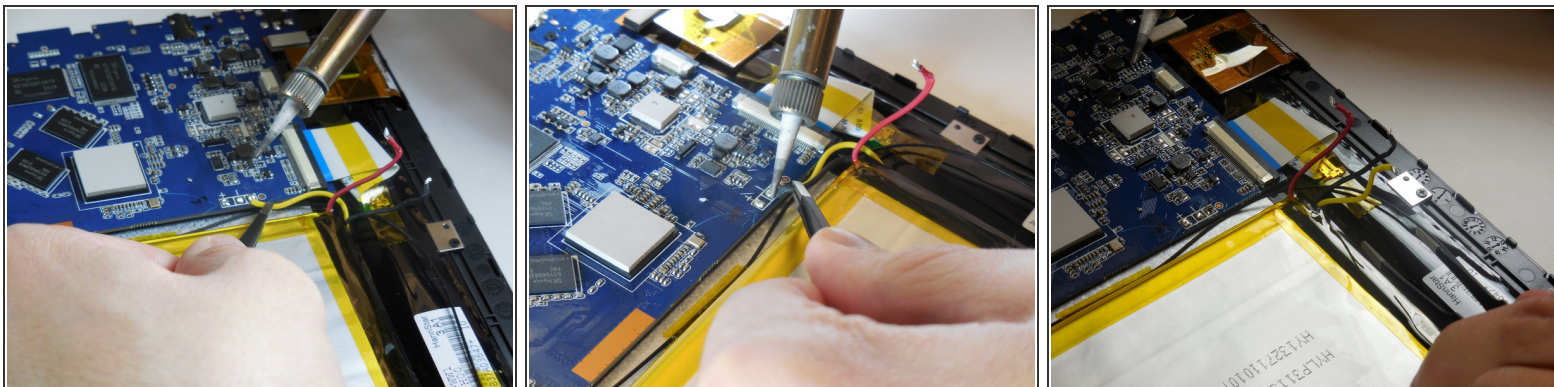



- Desolder the connection, while using the tweezers to grab hold of the yellow wire.

Step 10






- The battery is attached to the tablet with an adhesive. Use the flat end of the plastic spudger to peel the battery off the tablet

Step 11 — Front and Rear Camera Replacement

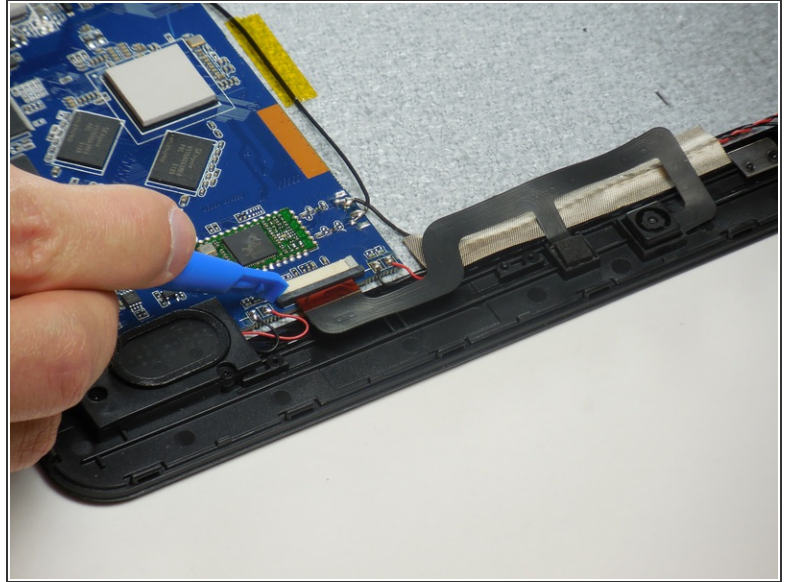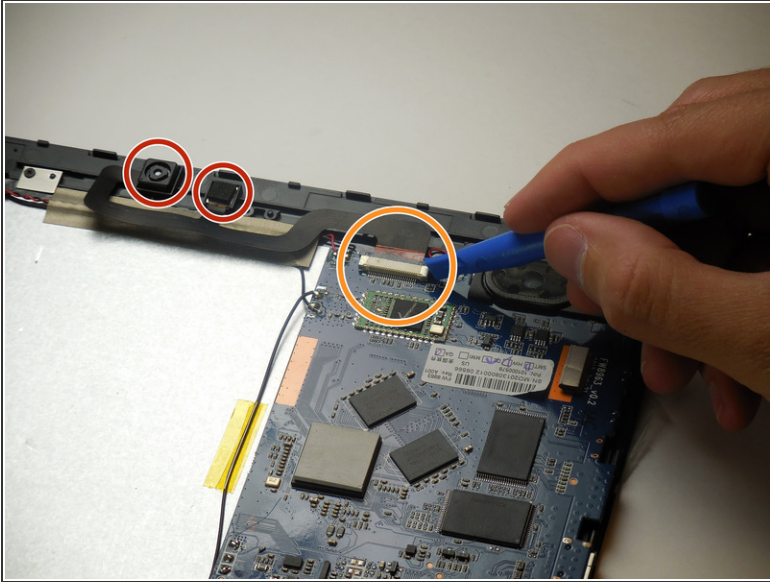

- Identify the ribbon connector attached to the camera and where it connects to the circuit board.
- The two cameras are connected with one ribbon cable.
- Zero insertion force connector.

Step 12

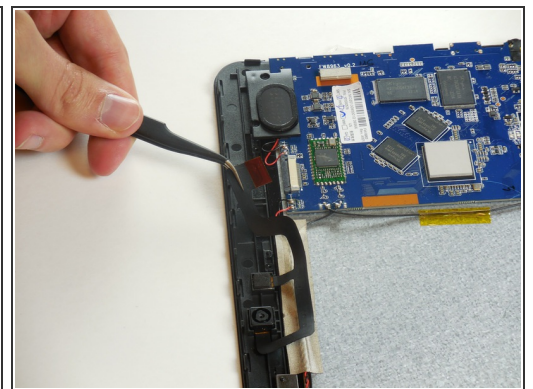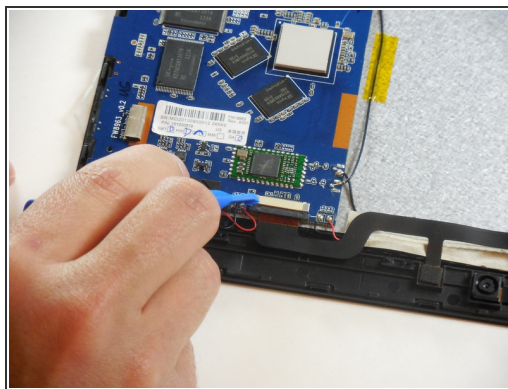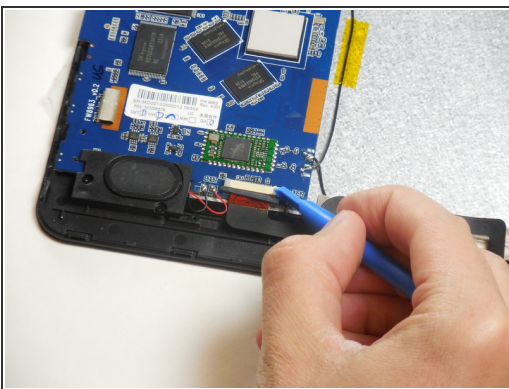

- The sliding zero insertion force (ZIF) connector is easy to disconnect. Use the plastic opening tool or a fingernail to slide the tab out, then pull the cable out.

Step 13



- Pull the cameras out of their resting places in a straight upward motion.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-11 01:11:12 PM.